



SUMITOMO CHEMICAL

Creative Hybrid Chemistry
For a Better Tomorrow

Product Databook

(Excerpt)

□ *High Purity Alumina (HPA)*



Table of Contents

1. Aluminum Hydroxide	
➤ Generic Grade	Page 2
➤ Fine Grade / Fine, Very Fine, Low-Soda	Page 2
➤ Fine Grade / High-Whiteness	Page 3
➤ Fine Grade / High-Whiteness (Surface Treated)	Page 3
2. Aluminum Oxide (Alumina)	
➤ Normal Soda / Unground	Page 4
➤ Intermediate Soda / Unground	Page 4
➤ Normal Soda / Ground	Page 5
➤ Low Soda / Unground	Page 6
➤ Low Soda / Ground	Page 6
➤ Normal Soda / Easy-sintering	Page 7
➤ Low Soda / Easy-sintering	Page 8
3. High Purity Alumina (HPA)	
➤ High Purity Alumina (HPA)	Page 9
➤ Advanced Alumina (AA)	Page 10
➤ Gamma HPA	Page 11
4. Activated Alumina / Hydraulic Alumina	
➤ Activated Alumina : Powder Shape	Page 12
➤ Activated Alumina : Spherical (KH)	Page 13
➤ Activated Alumina : Spherical (NK)	Page 13
➤ Hydraulic Alumina	Page 14
5. Plant & Office Location / Contact	

<Important Notice for Users of this Databook>

- (1) All data in this data book is typical and not guaranteed. The typical properties of all the listed products in this data-book are subject to change without prior notice due to continual improvements.
- (2) Applications mentioned in this databook are examples without any guarantee. Fitness for any particular purpose should be verified by customers.
- (3) Please refrain from using products in this databook for medical and food applications.

3. High Purity Alumina (HPA)





Sumitomo High Purity Aluminas(HPA) are uniform fine powder characterized by fine powder form of highly pure and homogeneous crystal structure. They're manufactured by aluminium alkoxide hydrolysis process.

High Purity Alumina (HPA)

Product		AKX-5	AKP-20	AKP-30	AKP-50	AKP-53	AKP-3000	
Typical Properties								
Crystal Structure		α	α	α	α	α	α	
Purity(Al ₂ O ₃)	[%]	≥ 99.99	≥ 99.99	≥ 99.99	≥ 99.99	≥ 99.99	≥ 99.99	
Mean Particle Size (MT3300)	[μm]	-	0.46	0.27	0.20	0.18	0.70	
Loose Bulk Density	[g/cm ³]	2.2	0.9	0.9	0.9	1	0.41	
Tapped Bulk Density	[g/cm ³]	-	1.4	1.3	1.3	1.4	0.80	
BET Surface Area	[m ² /g]	0.3	4.3	6.7	10.3	11.7	4.5	
Impurity	Si	[ppm]	6	16	14	11	33	4
	Fe	[ppm]	3	3	3	4	4	3
	Na	[ppm]	2	4	2	2	2	2
	Mg	[ppm]	1	3	3	2	5	1
	Cu	[ppm]	1	1	1	1	1	1
Packing	PE Bag		20kg	20kg	20kg	20kg	10kg	
	Paper Drum	100kg						
Application	Single Crystal	High-strength and high-density Ceramics, Composite Materials, Additives for non-Oxide Ceramics, Abrasives, Plasma Spray, Ceramic Filter, etc.					Insulation layer of Li-ion Secondary Battery	

AKX-5 : Various particle sizes of AKX-5 make the bulk density high, so it is suitable for growing single crystal.


AKP Series : High purity powder composed of homogeneous α-alumina crystal particles.

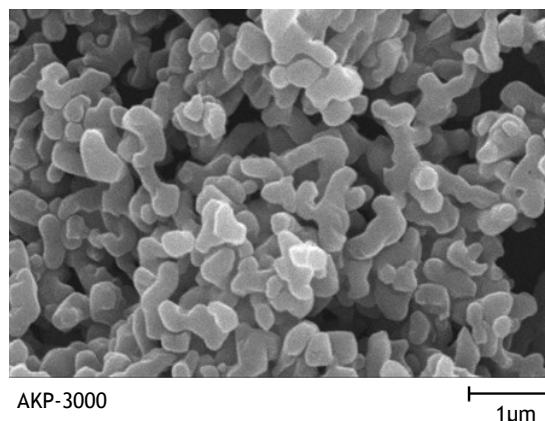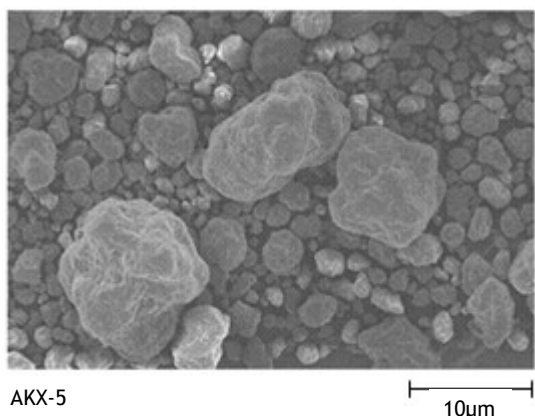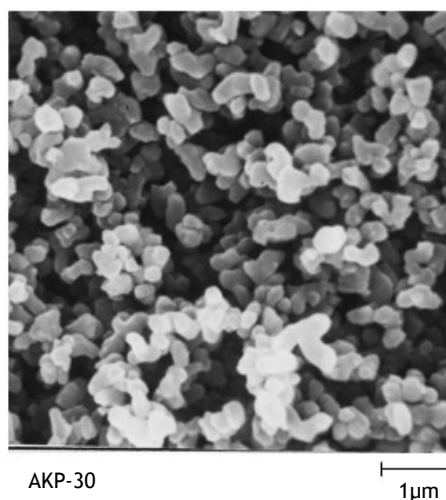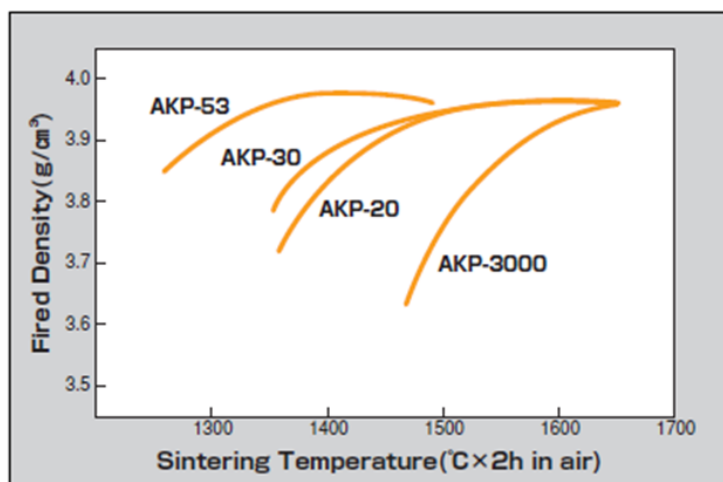

Sumitomo Chemical Advanced Aluminas are α -alumina single crystals with precisely controlled particle size distribution and almost-spherical polyhedral shape.


Advanced Alumina (AA)

Product		AA-03	AA-04	AA-05	AA-07	AA-1.5	AA-3	AA-18
Typical Properties								
Crystal Structure		α	α	α	α	α	α	α
Purity(Al_2O_3)	[%]	≥ 99.99	≥ 99.99	≥ 99.99	≥ 99.99	≥ 99.99	≥ 99.99	≥ 99.99
Mean Particle Size(MT3300)	[μm]	0.44	0.50	0.53	0.83	1.6	3.4	20.3
Loose Bulk Density	[g/cm ³]	0.5	0.5	0.6	0.6	0.6	0.7	2.0
Tapped Bulk Density	[g/cm ³]	0.9	1.0	1.1	1.2	1.3	1.5	2.4
BET Surface Area	[m ² /g]	5.2	4.1	3.2	2.2	1.1	0.5	0.1
Impurity	Si [ppm]	5	4	3	3	4	18	15
	Fe [ppm]	4	4	4	4	3	3	5
	Na [ppm]	5	5	5	5	5	5	2
	Mg [ppm]	1	1	1	1	1	1	1
	Cu [ppm]	1	1	1	1	1	1	1
Packing	PE Bag	20kg	20kg	20kg	20kg	20kg	20kg	
	Pail Can							20kg
Application		High-strength and high-density Ceramics, Resin filler(thermal conductive materials), Plasma Spray, Catalyst, Ceramic Filter, etc.						

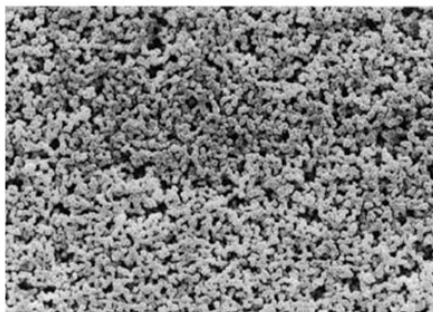


AA-04

5 μm

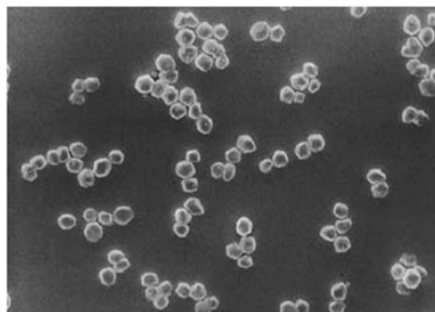



AA-1.5

10 μm

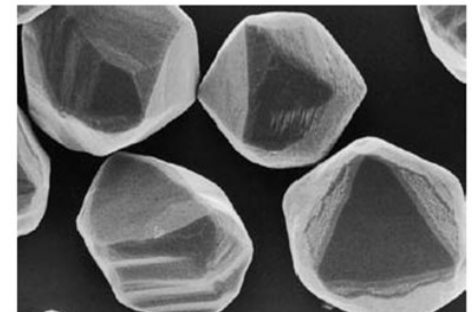

AA-18

20 μm

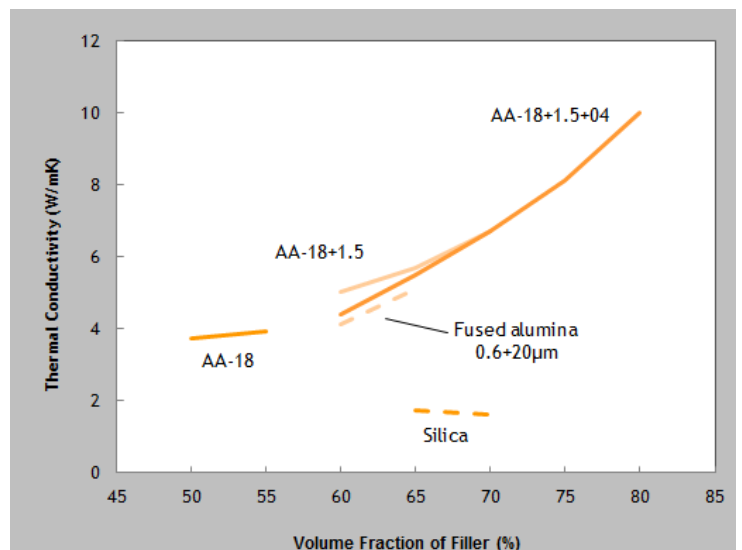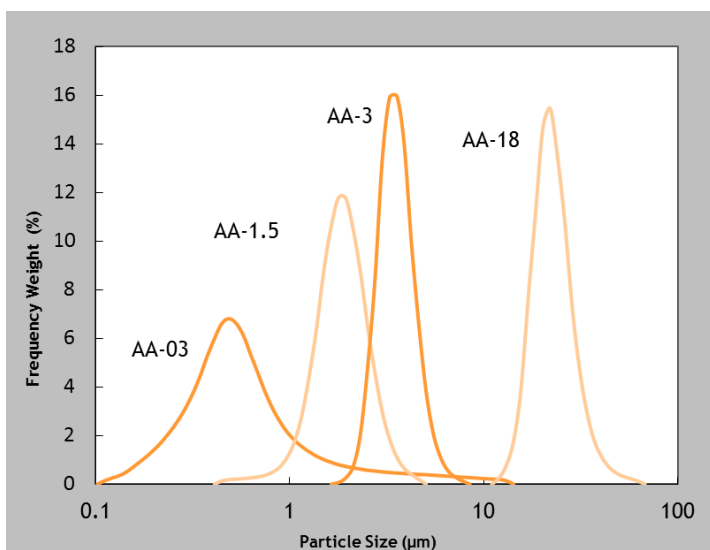


Gamma HPA

Typical Properties		Product	AKP-G15	AKP-G07
Crystal Structure			γ	θ
Purity(Al_2O_3)	[%]		≥ 99.99	≥ 99.99
Loose Bulk Density	[g/cm ³]		0.14	-
Tapped Bulk Density	[g/cm ³]		0.19	0.3
BET Surface Area	[m ² /g]		164	72.9
Impurity	Si	[ppm]	2	
	Fe	[ppm]	3	
	Na	[ppm]	2	
	Mg	[ppm]	1	
	Cu	[ppm]	≤ 1	
Humidity	[%]			0
Packing	Corrugated Paper Box		10Kg	20Kg



AKP-G15



0.1 μm

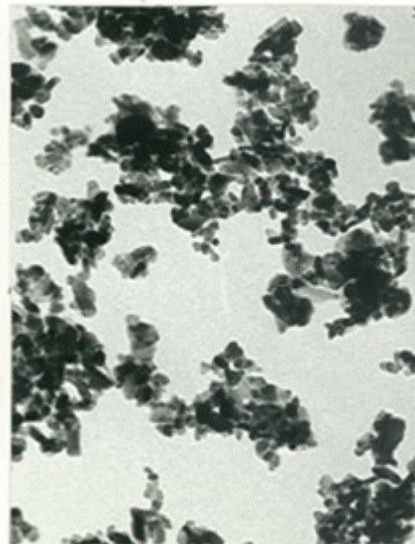

AKP-G07

0.1 μm

Plant & Office Location / Contact

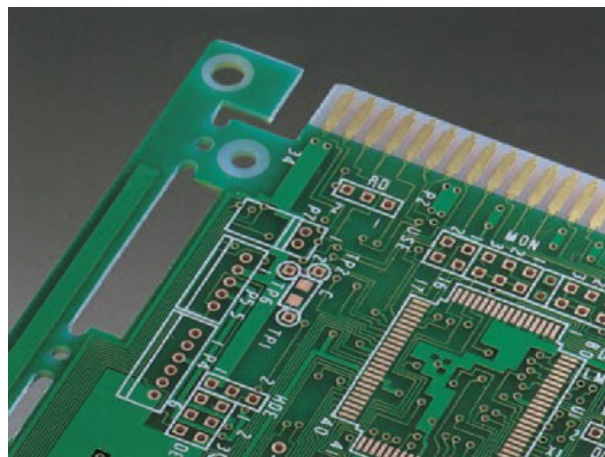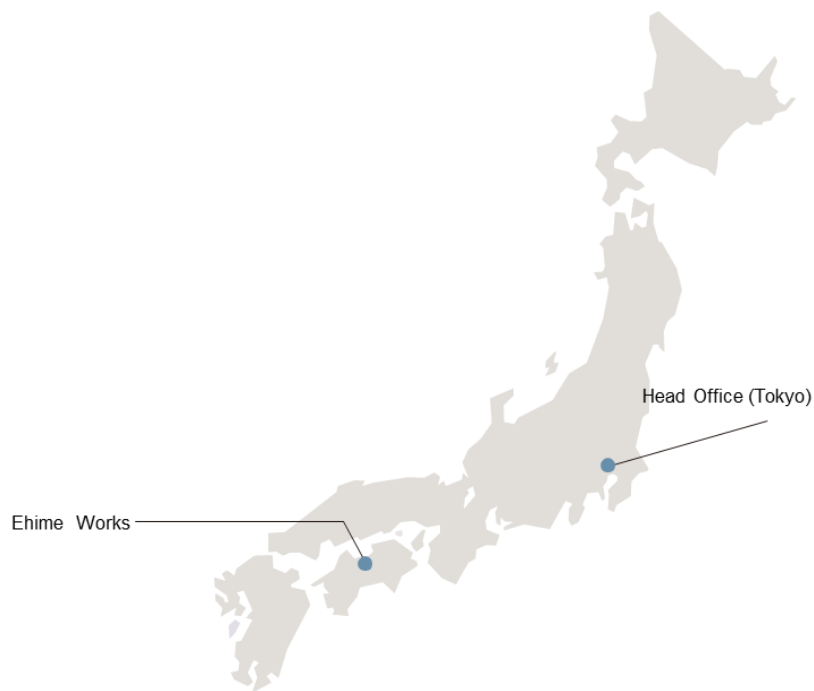

Aluminum Hydroxide as CCL flame retardant.



High Purity Alumina as a sapphire raw material.

Contact for Sales and Technical Information (All Products)



Alumina Products Dept. / Functional Materials Dept.
27-1, Shinkawa 2-chome, Chuo-ku, Tokyo, 104-8260, Japan
TEL +81 3 5543 5321 FAX +81 3 5543 5912

Website : <http://www.sumitomo-chem.co.jp/english>
Web-inquiry : https://www.sumitomo-chem.co.jp/cgi-bin/toiawase_seihin_e/form.cgi

Contact for Activated Alumina/Hydraulic Alumina Sales

Sumika Alchem Co., Ltd.
6-17, Koraihashi, 4-chome, Chuo-ku, Osaka
541-0043, Japan
TEL +81 6 6204 1291 FAX +81 6 6204 1290